

All about your Whirlpool Whitemagic

Welcome To Whirlpool Family	1
Know your Fully Automatic	2
Installing your Fully Automatic Washing Machine	3
Washing Process	5
Understanding the control panel	6
Simple tips for trouble free performance	9
Easy troubleshooting that keeps you in control	10
Safety Precautions and Maintenance suggestions	11
Program Timing	12
Wiring Diagram	13
Service at your door step	14
Specifications	16



Welcome to the Whirlpool family

Dear Homemaker,

Congratulations on bringing home the new Whirlpool Whitemagic Washing Machine. We would like to welcome you to the global fraternity of Whirlpool homemakers who believe in giving their families nothing but the best.

You would be proud to know that Whirlpool is the largest home appliance company in the world and that a Whirlpool appliance finds a new home in some part of the world, every two seconds. This has been possible because homemakers like you choose Whirlpool and reinforce our belief in Innovation, Operational and Customer Excellence. Whitemagic Washing Machines are elegantly styled and convenient to use. They promise you premium quality and fill your life with the magic of Whirlpool. To get the best out of your Whitemagic Washing Machine, use this simple and easy to understand guide and follow the instructions. We would love to assist you with your queries and suggestions at the Whirlpool Home Care Centre number mentioned in this user guide or at www.whirlpool.com.ph.


We wish you years of joyful homemaking with your Whirlpool Whitemagic Washing Machine and look forward to having a great relationship with you.

Yours Sincerely

Whirlpool Corporation



Know your Fully Automatic

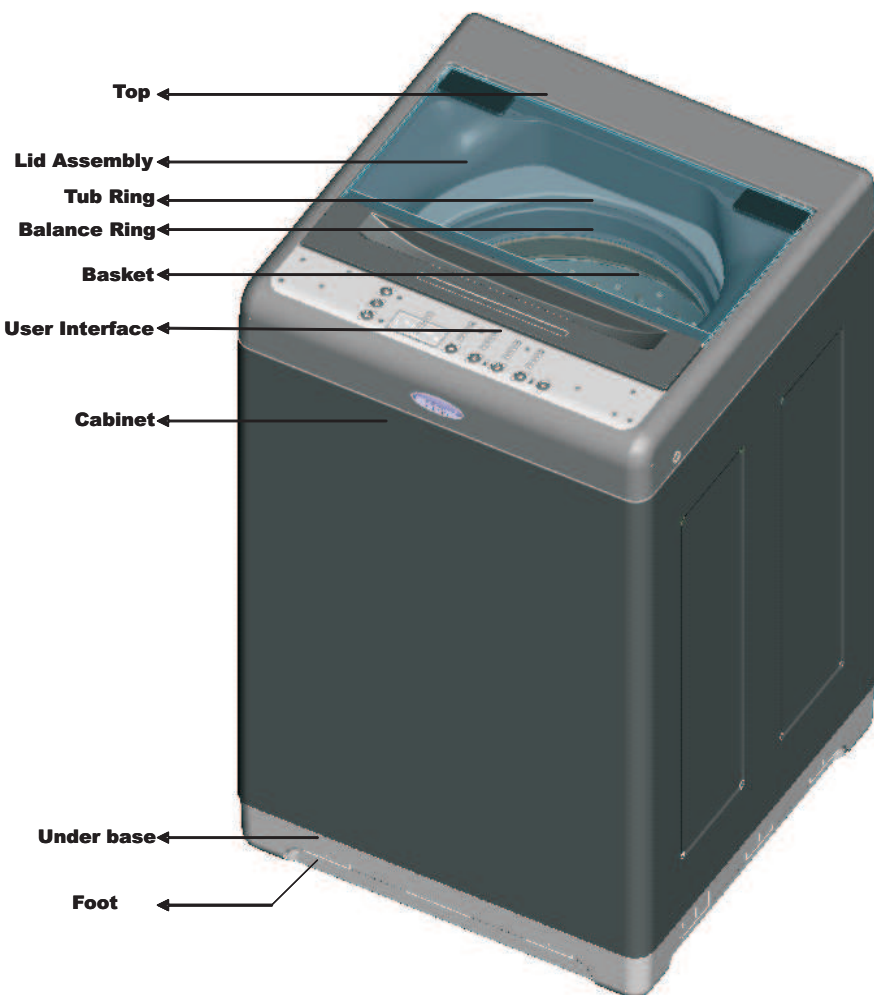

Installing your Fully Automatic Washing Machine

Installing Electrical Connections

Ensure the earth connection in your electrical supply is proper before connecting the power cord. The socket should be standard and independent of pin type of 220V AC, 60Hz. A connection with separate line fuse or circuit breaker of the value of 6A.

Caution:

- Do not use extension junction box since it may not be properly earthed.
- The appliance must be earthed. The producer declines any responsibility for damage caused by failure to observe this rule. You are therefore advised to check that your household supply has an efficient earth.

⚠ WARNING
Electrical Shock Hazard
<ul style="list-style-type: none"> • Do not remove ground point. • Do not use an adapter. • Do not use an extension cord. • Failure to follow these instructions can result in death, fire or electrical shock.

Installing the Machine:

- Do not place on slanting, uneven, unstable surfaces.
- Place on a solid leveled surface to avoid excessive vibration during operation.
- Keep the machine at least 10cm away from the wall on all sides.
- Place the drain hose flat on the floor before operating the machine.
- Carpet must not obstruct the opening in the base.
- Washing machine should be connected always to socket.
- If the supply cord is damaged it must be replaced by the manufacturer, its service or similarly qualified persons in order to avoid a hazard.
- Discard the cushion balance ring assy cover.
- Ensure the assembly of rat mesh at the time of installation.




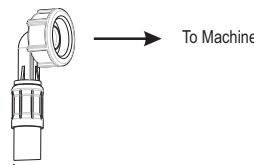

⚠ WARNING
Personal Injury Hazard
<ul style="list-style-type: none"> • Use two or more people to move and install the Washing machine. • Failure to do so can injure back or other body parts.

Note:

- Installation shall be done only by authorized service engineer.
- Parts removed during installation shall be properly disposed like screws, inlet valve plug.

Fill Hose Connection

The fill hose connection will be demonstrated by the technician when he comes to install your washing machine. However, the steps for the connections are given below for your reference.
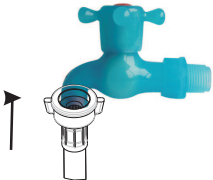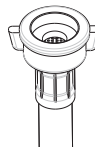
<p>Fill Hose</p> <p>To be connected to the water tap.</p>	<p>STEP 1</p> <p>Locate the Tap end of the Fill hose to the Tap and gently screw it with the Tap.</p> 
<p>The Fill Hose connector consists of 2 Ends:</p> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;">A- The Tap End</div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;">B- The Machine End</div> </div>	<p>STEP 2</p> <p>Fit the other end of the fill hose provided to the machine inlet.</p> 
<p>Use the adaptor only on circular cross section of taps. Do not use on elliptical or hexagonal mouth taps since the thread will not grip the tap properly.</p>	<p>How to detach Fill Hose:</p> <p>A. Close the Water Tap</p> <p>B. Unscrew the Fill Hose.</p> 

Washing Process

- Preparation for Washing :**
 - Connect the fill hose to a water tap and turn the tap on.
 - Unhook the drain hose and lay it flat on the floor
 - Plug the power cord into the electrical socket properly.
 - Loading the machine:**
 - Separate whites from colored clothes, and lint givers (e.g. towels) from lint takers(e.g. corduroy, synthetic fabrics, black color garments etc).
 - Do not stuff the clothes or wrap them around the Agipeller – drop them loosely and evenly.
 - The clothes should be able to move freely in the water for best results.
 - Setting the water level:**
 - Set the water level by selecting in the control panel to the desired level based on wash load.
 - Detergent.**
 - Open the lid assy and put the detergent in the dispenser.
- Note:**
- In case you have a very low water pressure i.e. if it takes more than 12 minutes to fill water to the ' high level', scatter the detergent evenly on the clothes around the Agitator/ Agipeller instead of using the detergent dispenser.
 - Some detergents must be fully dissolved before putting into the dispenser to get the best wash performance. Check instructions on the detergent pack .Pre dissolving detergent in warm water when washing in cold water can improve its performance.
 - If too much detergent is used or cold water is used ,it doesn't dissolve completely and remain on the garments, hose or spin basket, causing contamination on clothes
 - Use only mild liquid detergent specially recommended for woollen fabrics.
- Power button:**

Press the Power button to switch On or Off the machine.
 - Programming the machine:**


Program the machine for the washing process as explained earlier. Press 'Start ' to begin the wash process
 - End of the Wash Process:**

The machine chimes to indicate the end of the wash process. If the clothes are not removed for up to 15 mins, after the end of the wash, the machine chimes again to remind you to do so. There is a second reminder after another 15 mins

Note:

- * Ensure the cloth load is immersed well below the Balance Ring assy, also ensure small clothes are loaded in the middle of the basket to avoid falling out of clothes when dry sensing (Load Detection) is in operation.
- * In case you want to add clothes after the 6th sense water level selection ensure the water level above the cloth by pressing the pause button and select the desired water level and press start to continue wash

Understanding the Control Panel

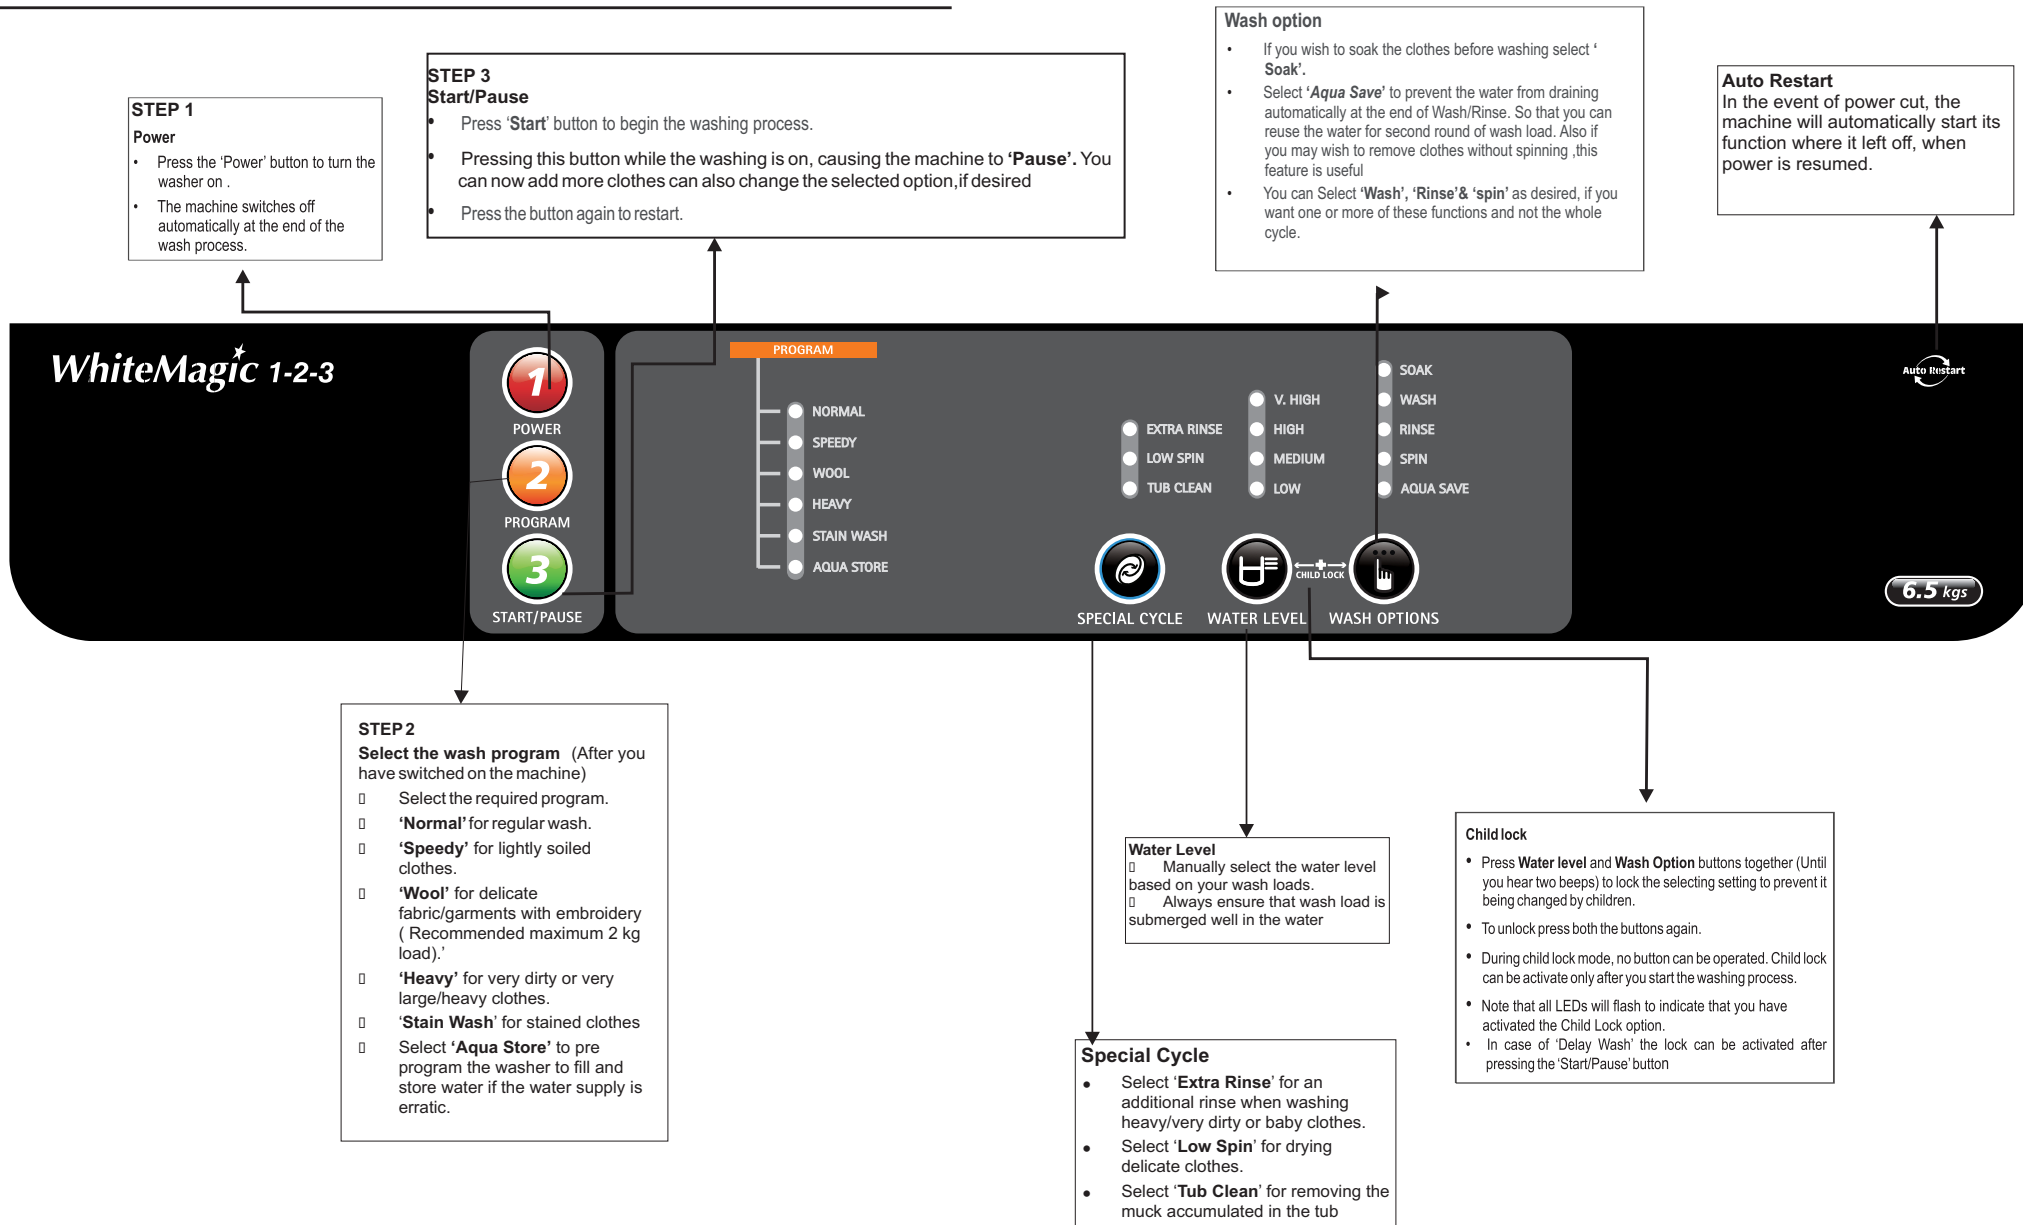

How to get the best out of your Washing Machine

Cleaning the Machine

After each wash, wipe the body of the washing machine with a soft cloth. If it is still dirty, wipe with a cloth soaked in a solution of water detergent.



Detergent Dispenser:

- Pull out the tray fully and lift it upwards to remove the detergent holder.
- Clean the dispenser housing & drawer with water if you find any traces of detergent in it.
- Reassemble the tray and push it back to its position (Flush with top).

Bleach Dispenser


- Flush the dispenser clean with water after every use.

Lint Filter

- Loose lint is captured in a unique comb structure which is placed under the basket

Water Inlet

- Over the period of time, impurities in the water reduces the water inflow to a trickle, which in turn clogs the inlet and slows down the overall wash process.
- Unscrew fill hose from machine
- Gently pull out filter
- Wash directly under tap.
- Fit back filter and fill hose.

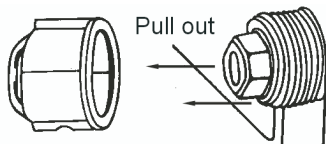

Filter shall be properly assembled back to the machine after cleaning

Simple Tips For Trouble Free Performance

Foreign object entrapment

Please ensure that you empty all pockets of objects such as coins, pens, toothpicks, match sticks etc. They may stuck inside the machine and could even cause damage to your clothes.

Metallic buckles / zippers

All metallic buckles/zippers must be closed putting clothes into the washing machine. Open buckles/zippers could damage/ scratch inner plastic parts and may even damage clothes.

Lint

Separate whites from colored clothes when washing. Always ensure that 'lint – giving' clothes (e.g. towels) are separated from 'lint – takers' (e.g. Synthetic fibers, black color garments). Make Sure that you dose the recommended amount of detergent for each wash load.

Tangling

Do not stuff clothes or wrap them around the Agitator/Impeller/ Agipeller.. Drop them loosely around the Agitator/Impeller/ Agipeller.

Electrical

Kindly ensure that the household electrical wiring and earthing is proper, Plug point must be intact.

Rodents/Insects

Protect your machine from Rodents/Insects. Rat bites can damage the wiring leading to short circuits or general non – functioning of the machine . We recommend a WOIL rat mesh

Following these simple trouble shooting tips can help you avoid a visit by our technician and also help you save Rs.100/- the charge for one visit


Easy Trouble Shooting that keeps you in control

Error type	Beeper timings	LED display
LE - Lid Open during wash, Rinse and Spin	Beep 1.5 s – Off 5 s This sequence to be repeated until the lid is closed.	Cycle status LEDs should start flashing at 1Hz rate.
dE - Long drain (Pressure sensor not detecting the Reset level even after 4 minutes of drain)	500 ms on – 500 ms off Above sequence repeated every 5 Seconds interval	Wash Option group LEDs should flash at 2 Hz rate.
FE - Long Fill	500 ms on – 500 ms off Above sequence repeated every 5 seconds interval	Water Level group LEDs should flash at 2 Hz rate.
E1- Frequency output from the Pr. Sensor out of Range	500 ms on – 500 ms off Above sequence repeated every 5 seconds interval	Program group LEDs should flash at 2 Hz rate.
tSC - Key short circuit error	200 ms beep, 200 ms Off. The sequence to be repeated endlessly.	All LEDs to be turned Off.



Safety precautions and Maintenance suggestions

- Do not pull the cord to disconnect the plug. Hold the plug itself.
- Do not use an adaptor or extension cord to plug in your washing machine.
- Do not drag the washing machine to its position. Always lift and move the machine keeping the wheel's direction in mind.
- Do not move the washing machine if it contains the wash load or water or when in operation.
- Do not attempt to dismantle the washing machine.
- Do not expose the machine to direct sunlight or rain*.
- Do not install the machine in a damp area such as bathroom, with exposure to direct shower, there is a danger of electric shock, fire, machine trouble, corrosion and rusting
- Do not spill water over the machine*. In case of spillage, wipe & dry.
- Avoid the machine coming in contact with floor cleaning chemicals*.
- Do not wash or spray water over switch or control panel.
- To prevent deformation of plastic parts, do not use water with a temperature greater than 55 °C.
- Do not allow children to play with the machine.
- Do not wash shoes or utensils in the machine.
- Do not put your hands in the rotating spin-basket till it stops completely.
- Do not place heavy objects on the power cord.
- Do not use caustic soda or bleach to clean the washing machine.
- Make sure the lid is closed while washing or spinning.
- Keep machine away from fire or heat.
- WOIL will not be responsible if the user uses accessories not manufactured or recommended by WOIL
- *Exposure can lead to rusting/corrosion.

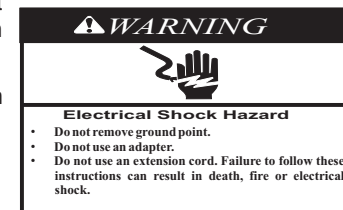


(TIME IN MINUTES)

Program Timing

Wire Diagram

Operation	Sequence	PROGRAM							
		Normal			SPEEDY	Wool	Heavy		
	Water Level	High & Xtra High	Medium	Low	All Levels	All Levels	High & Xtra High	Medium	Low
	Fill	-		-	-	-	-	-	-
Soak (Optional)	Soak/ Agitation	32.0	32.0	32.0	-	-	32.0	32.0	32.0
Wash	Agitation	3.0	3.0	3.0	-	-	3.0	3.0	3.0
	Dynamic soak	3.0	3.0	3.0	-	-	6.0	5.0	4.0
	Agitation	3.0	2.0	3.0	-	-	3.0	3.0	3.0
	Dynamic soak	3.0	3.0	3.0	-	-	2.0	5.0	4.0
	Agitation	3.0	2.0	2.0	-	2.0	3.0	4.0	2.0
	Dynamic soak	2.0			-	20.0	6.0	-	-
	Agitation	3.0	2.0		6.5	-	4.0	-	-
	Untangle cycle	2.0	2.0	2.0	1.5	-	2.0	2.0	2.0
RINSE	Drain, Max	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0
	SIS	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
	Spin	2.0	2.0	2.0	2.0	0.5	2.0	2.0	2.0
	Fill	-	-	-	-	-	-	-	-
	Agitation	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0
	Untangle cycle	1.0	1.0	1.0	1.0	-	1.0	1.0	1.0
	Drain, Max	-	-	-	-	-	4.0	4.0	4.0
	SIS	-	-	-	-	-	3.0	3.0	3.0
	Spin	-	-	-	-	-	2.0	2.0	2.0
	Fill	-	-	-	-	-	-	-	-
	Agitation	-	-	-	-	-	4.0	4.0	4.0
	Untangle cycle	-	-	-	-	-	1.0	1.0	1.0
	Drain, Max	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0
	SIS	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
SPIN	Spin	2.0	2.0	2.0	2.0	3.0	2.0	2.0	2.0
	Motor-off	0.3	0.3	0.3	0.3	-	0.3	0.3	0.3
	Spin	2.0			-	-	2.0		
	Motor-off	0.3			-	-	0.3		
	Spin	1.5	1.5	1.5	1.5	-	1.5	1.5	1.5
	Motor-off	0.5	0.5	0.5	0.5	-	0.5	0.5	0.5
Total Time (Excluding Fill & Including Agitronic soak)		75.5	68.3	67.3	33.3	43.5	93.5	85.3	81.8
Total Timing (Excluding Fill & Agitronic Soak)		49.5	42.3	41.3	-	-	70.5	61.3	56.8

SIS - Short Interval Spin

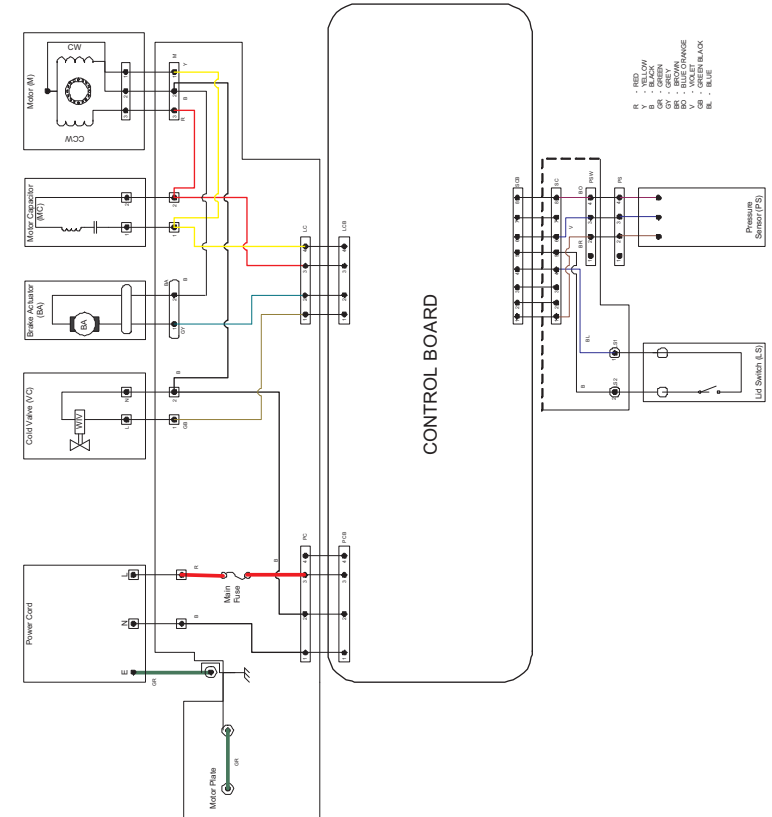



Service at your door step

Shifting your Whirlpool Washing Machine

- It is essential to pack the machine properly before it is move from one place to another to prevent any damages during transportation.
- To pack the machine properly, kindly contact the authorized Whirlpool Service Center in your city. During the warranty period, whenever the machine is shifted from the original location to another, a warranty transfer fee may be collected. This will also include the reinstallation charge.
- In addition to proper packing, please take extra precautions to prevent transit damage. Damages to the machine during transportation by the customer is not covered by the warranty provided by Whirlpool.

Service on Sundays and Holidays

- In some cities where Whirlpool provides service, customers can avail of Sunday/Holiday Service upon your specific request. For details, please contact our service centers.

After Sales Service

For any questions or service requests , please contact our Customer Service Office

Excellence Appliance Technologies Inc.
24 D. Tuazon Street Quezon City 1113 Philippines
Tel No (632) 7327370 Fax No (632) 7414929
Email : service@exatech.com.ph Mobile : +63918-9373783

Specifications	Model code???	
Power Supply	220V AC ,60Hz 6 Amps	
Capacity*	6.5 kg of dry clothes	
Type of Wash System	Agipeller	
Agipeller rpm	150	
Spin Speed	740rpm(Max)	
Machine Weight	33kg	
Input Power (Motor Rating)	360W	
Wash/Spin Basket	Stainless Steel	
Soak	Yes	
Bleach inlet	Yes	
Lint Filter	Yes	
Rat Mesh	Yes	
Dimensions(WxDxH)	540x565x925	
Water Pressure	0.2kg/cm2 to 7kg/cm2	
Temperature Permitted	50°C	60°C
Machine Class	Class 1	